
Caring for your EZPull Voice Release

Using EZPull Voice Release Remote in the rain:

The microphone on EZPull voice release remotes is waterproof and will not be damaged by a splash of water. However, when the microphone port is covered with a drop of water or when the wind guard is soaked with water, the microphone is less sensitive to sound.

Therefore, when using EZPull voice release in rain, place a "Ziploc" bags over the remote.

The most suitable size is *Ziploc Quart Storage 7" x 7-11/16"*. The bag must stay open at the bottom. In windy conditions use a clip to attach the bag to the post of the stand.



EZPull Voice Release wireless remotes are not completely waterproof. EZPull remotes are splash resistant however, if exposed to torrential rain; water can get into the battery compartment.

Drying your EZPull remote:

In the event your EZPull remote was exposed to water, take the following steps to dry the device:

1. Remove the rubber boot.
2. Use a paper towel to wipe any dripping water.
3. Remove the battery door and batteries and set aside.
4. Place the unit, battery compartment facing up, on a dry surface in well ventilated area and let dry overnight. If available, use a fan to blow air around the unit.

WARNING: Never use hot air, hair dryer or any other heat source to dry EZPull equipment!