
EZPull Remote User Manual

EZPull Remote is manual release wireless controller. EZPull remote can be configured for use in two trap Standard Sporting Clays, Skeet or a three trap Super-Sporting setup. For configuration setup see document EZP-Sport_setup.pdf.

1. Releasing targets: Press and release any of the keys for the desired target(s). Note that light(s) corresponding with the targets will glow:
 - 1.1. A/H: releases trap 1/A or Skeet High
 - 1.2. B/L: releases trap 2/B or Skeet Low
 - 1.3. T/D: releases True pair A + B, Skeet Doubles or in 3/C Super Sporting mode
 - 1.4. R: In Sporting mode, releases a following Report pair. First A then, after a 3 seconds delay, target B. In Skeet mode R does nothing. In Super Sporting mode R is used to throw a True-Pair.
2. True Pair in Super-Sporting mode:
 - 2.1. Select targets before the shooter calls pull: Press the R key. The left light flashes indicating you should select a first target. Press a target key (A, B or T/C). Now the left light is steady and the right light is flashing indicating the unit is waiting for selection of the second target. Press another target key.
 - 2.2. When the shooter calls pull: Press the R key again to throw the pair.
 - 2.3. Example True-Pair A+C: Press R then A then C. On the pull, press R.
 - 2.4. If you press any of the target keys (A, B or T/C) after selecting the pair, the True Pair selection is cancelled and a single target is released.

Low Battery: If after pressing any of the keys, the light alternate rapidly, then its time to replace the battery.

3. Arm the EZPull: Press and hold the "R" key for 5 seconds. Both lights will start flashing. When both lights are glowing steady, release the key. The EZPull is armed and ready to release targets
4. Disarm the EZPull: EZPull can be disarmed. Press and hold the "R" key for approximately 10 seconds. The Left light will start flashing. When light are off, release the key. The EZPull is disarmed.

Warning: To prevent serious injury, you must disarm the EZPull before handling trap machines or standing in front of a trap

