

## ***Replacing the Coin Battery in EZPull TX-2/3 Basic Remote***

1. Work indoors on clean dry surface. Remove the rubber boot and clean the plastic housing. Turn face down and remove the four screws on the back of the unit. Remove the cover
2. Using a small screwdriver push the old battery out of the holder as shown in picture below. Properly dispose of the old battery do not throw in trash.
3. Important: Turn the unit face up and press the keys on the keypad a few times. If you do not press the keys, the unit will not work properly after replacing the battery!
4. Take a fresh CR2354 battery and push into the holder with the (+) sign UP!
5. Replace the cover and put back the screws. Do not over tighten the screws.
6. Replace the rubber boot.

