

# EZPull RXB-01SK Skeet/Trap Receiver - Setup Manual

## Connecting the Receiver to the Trap

The RXB-01 is a remote switching device designed for indoor use with Skeet or Trap target throwers.

1. Mounting: use keyholes to mount the receiver close to an opening in the Trap House.
2. Wiring: The RXB-01 comes wired with a 4 wire cable:

Wire Color	Wire Function
RED	+12VDC
BLACK	GROUND (-)
GREEN	Trap Switch N/O
WHITE	Trap Switch COM

The RED and BLACK wires are connected to the +/- terminals of a barrel type receptacle for an AC/DC adaptor. Adaptor must be none switching transformer type A wall transformer none regulated AC/DC adaptor specified 9VDC, 300mA is suitable. See Power Supply Specifications below.

3. The GREEN and WHITE wires are connected to a "European terminal". Connect the terminal to a two wire cable terminated with a plug suitable for your trap machine's "pull cord".

**WARNING:** Do not exceed the maximum ratings!

- \* Maximum Trap switch current < 2Amp
- \* Maximum DC Trap switch < 30VDC
- \* Maximum AC Trap switch < 250VAC

4. Power Up: Plug the AC/DC adaptor to a wall socket.

## Receiver LED Indicators

The receiver is equipped with Blue, Red and Yellow LED light indicators.

1. The Blue LED is normally on, but when the receiver senses radio traffic, the Blue LED goes off causing the LED to appear as if it is flashing. This is useful for troubleshooting.

2. The Red LED is normally off and indicates the following:
  - 2.1. When a Target command is received, the Red LED turns on momentarily.
  - 2.2. After each target release, the receiver checks the battery condition. When the receiver detects a low battery (LED ACID 12V battery), the Red LED flashes a few times.
  - 2.3. When in Pairing mode (see below), the Red LED glows steady.
3. The Yellow LED is normally off It is used for timing setup indications.



---

## EZPull RXB-01SK Skeet/Trap Receiver - Setup Manual

---

### Pairing the Receiver with the Transmitter

Each shooting station requires a transmitter and receiver(s) on the same unique address code.

To set the address on the transmitter, see the setup manual for your specific EZPull model.

The RXB-01 receiver is "Paired" with the EZPull on the desired Trap number by simply pressing the specific Trap release key on the transmitter.

1. Ensure the receiver is powered up. A Blue LED should glow steady. A flashing Blue indicates EZPull systems are being used by neighboring shooting stations.
2. To avoid mismatch with neighboring shooting stations, ensure EZPull systems on other fields/stations are not being used during this procedure.
3. Locate the magnetic Pairing switch on the receiver. It looks like a red bar on the side of the circuit board across from the LED indicators.
4. Hold a small magnet directly on top of the Pairing switch. Blue and Red LEDs will start alternating. Keep holding the magnet until only the Red LED glows steady and immediately remove the magnet. The receiver is now waiting for a "call" from a transmitter.

**Notice:** If you keep holding the magnet close to the pairing switch after the Red LED goes steady, the Yellow LED will blink and the system will enter delay setup mode (see below).

#### 4.1. Pairing directly from a standalone transmitter:

Move at least 5 yards away from the receiver and then press the respective target key on the EZPull transmitter. If Pairing is successful, the lights will flash rapidly and the receiver will revert to normal operating mode.

#### 4.2. Pairing with TargetManager card reader:

Place a loaded target card in the TargetManager. Stand close to the TargetManager so that the wireless remote is within range of the card reader. Then press the respective target key on the EZPull transmitter. You may also press keys 1 through 4 on the TargetManager. If Pairing is successful, the lights will flash rapidly and the receiver will revert to normal operating mode.

5. Press the target key on the EZPull transmitter again to verify pairing. The Red target LED should glow momentarily.
6. Troubleshooting Pairing:
  - 6.1. Blue and Yellow LEDs alternating – you held the magnet too long and entered the timing setup mode. Remove the magnet and then place it above the Pairing switch to abort.
  - 6.2. If the Red LED remains steady, check that your transmitter is working, or try with another transmitter.
  - 6.3. If the Red LED goes off without flashing rapidly, the pairing failed, try again.
7. To abort Pairing mode, place the magnet above the Pairing switch and remove it at once, the Red LED will turn off and the Blue LED will turn on.

---

## EZPull RXB-01SK Skeet/Trap Receiver - Setup Manual

---

### Using the Transmitter to setup timing functions:

The RXB-01 can be set for several timing functions such as delayed release, increased latch duration and reload delay.

1. To enter the timing setup mode:
  - 1.1. With the receiver ON, hold the magnet directly on top of the Pairing switch. Blue and Red LEDs will start alternating. Keep holding the magnet until Blue and Yellow LEDs start alternating. Remove the magnet.
  - 1.2. The receiver is now waiting for a "setup command" from the transmitter. While waiting for a command, the LEDs display the current timing settings in a repetitive loop.
  - 1.3. To abort timing setup mode, place the magnet above the Pairing switch and remove it at once, the receiver will return to normal operation.
2. Setting the Release Delay: the RXB-01 can be set for a delayed release. This feature replaces expensive timers and is useful in setting precision timing on following pairs.
  - 2.1. The yellow LED indicates the release delay:
    - 2.1.1. No Delay - Yellow blinks once
    - 2.1.2. Delay 1 Sec- Yellow blinks twice
    - 2.1.3. Delay 2 Sec- Yellow blinks three times
    - 2.1.4. Delay 3 Sec- Yellow blinks four times
  - 2.2. The [1-A] button on the transmitter adjusts the release delay. Click the [1-A] button and observe the Yellow LED blinking. The adjustment is cyclical. See above:
    - 2.1.1. - 2.1.2. - 2.1.3. - 2.1.4. - 2.1.1. ...
3. Setting the Latch and Reload timing:

Latch time: some traps may require a longer period to release a target. The RXB-01 can be set to close the release switch for a longer period of time.

Reload time: this feature is for use with EZPull controllers that can throw a following pair from the same trap (*Rafael*).

  - 3.1. The Red LED indicates a longer reload period and the Blue LED indicates longer latch time:

- 3.1.1. Latch 0.4 Sec, Reload 2 Sec. – No lights
- 3.1.2. Latch **0.6** Sec, Reload 2 Sec. – Blue LED
- 3.1.3. Latch 0.4 Sec, Reload **4** Sec. – Red LED
- 3.1.4. Latch **0.6** Sec, Reload **4** Sec. – Blue and Red LEDs.

- 3.2. The [2-B] button on the transmitter adjusts the Latch and Reload timing. Click the [2-B] button and observe the LEDs. The adjustment is cyclical. See above: 3.1.1. - 3.1.2. - 3.1.3. - 3.1.4. - 3.1.1. ...

4. Save and Exit: Send a True pair A + B from the transmitter to save and abort the setup mode.
  - 4.1. From TX-C2/3 or TX-VR2, press the [T] key.
  - 4.2. From TX-4 or MTX-8, press [TP], then select [1-A] and [2-B] and then press [TP] again.

### Troubleshooting:

Always use comparative approach to troubleshooting. If both receivers don't work, the problem is most likely with the transmitter. If a transmitter works with one receiver but not with the other, check the receiver, etc.

Receiver does not throw targets - Stand close to receiver. While observing the LED indicators, press the respective key on the transmitter:

1. No lights – Check the receiver has power. Check that transmitter indicators are on when you press the key.
2. Red light on receiver turns on and Blue light turns off momentarily– the target command was received – check wiring to trap.

Blue light turns off momentarily but no Red light – check pairing with the transmitter. Follow the pairing procedure described above