

---

## EZPull TX-2S User Guide

---

**EZPull TX-2S** is a wireless, clay target release unit for Skeet and Sporting Clays. To ensure fast release, the TX-2S is equipped with stainless steel buttons that are sensitive to any touch.

**Always stand clear of any trap while handling the TX-2S!**

- 1. Releasing targets:** Press and release any of the keys for the desired target(s). Lights corresponding with the targets will glow:
  - 1.1. **H:** releases Skeet High or trap 1/**A**
  - 1.2. **L:** releases Skeet Low or trap 2/**B**
  - 1.3. **D:** releases Skeet Doubles or True Pair
- 2. International Skeet Delay:** When the TX-2S is configured for International Skeet random delay, the user can quickly switch between instant release and random delay (For configuration setup see *TX2S\_setup\_guide.pdf*):

**Warning:** Before changing the delay, stand clear from any trap or target!

  - 2.1. **Instant Release:** simultaneously press and hold the **D+H** keys. Keep holding until the center LED glows steady. Release the keys.
  - 2.2. **Random Delay:** simultaneously press and hold the **D + L** keys. Keep holding until the center LED glows steady. Release the keys.
- 3. Solo Delay:** This feature is not available on TX2S\_Pro. When the TX-2S is configured for 3 seconds solo delay, the user can quickly switch between instant release and solo delay (For configuration setup see *TX2\_setup\_guide.pdf*):

**Warning:** Before changing the delay, stand clear from any trap or target!

  - 3.1. **Instant Release:** simultaneously press and hold the **D+H** keys. Keep holding until the center LED glows steady. Release the keys.
  - 3.2. **Solo Delay:** simultaneously press and hold the **D + L** keys. Keep holding until the center LED glows steady. Release the keys.

- 4. Disarm the TX-2S:** To disable target release, place the device with buttons facing down.

**Warning:** To prevent injury, place the TX-2S "**face down**" before handling trap machines or standing in front of a trap



**Low Battery:** If after pressing any of the keys, the light alternate rapidly, then its time to replace the battery.