

EZPull TX4 Quick Guide

Super-Sporting or FITASC

When the TX4 is set to Super Sporting mode:

1. Singles: Press any target button 1-A, 2-B, 3-C or 4-D.
2. True pair: Press the center button (TP). All four lights will flash indicating no targets selected. Select the first trap using target buttons 1-4. The light corresponding with the selected trap will glow steady. The other lights will flash indicating you need to select a second trap. Select the second trap. Both lights will glow steady indicating the pair is ready for release. When the shooter calls "pull", press the TP button again to release the pair.
 - 2.1. To change the pair selection simply presses another target button. The newly selected trap will replace the first trap.
 - 2.2. To abort pair selection, press any two buttons simultaneously.
 - 2.3. To select a Rafael pair, select the same trap twice. The second target will follow in approximately 2.4 seconds.
 - 2.4. If you do not select both traps within 6 seconds, the pair request will timeout.
 - 2.5. Once both traps are selected, you have one minute (60 seconds) to throw the targets. After one minute, the pair requests will timeout.
3. True pair lock: It is possible to lock the True Pair selection so the same pair can be released repeatedly by pressing only the TP key.
 - 3.1. Press and hold the TP button until all four lights turn on (about 1.5 Seconds). Release the TP key. Select and release targets as per section 2 above.
 - 3.2. After the first pair, the lights of the selected targets remain on indicating locked pair mode. To release the pair again, press the TP key.
 - 3.3. To abort locked pair mode, press any of target keys 1-4.
 - 3.4. Locked pair mode will timeout if you do not release another pair within 90 seconds.
4. Two buttons options: If the TX4 is set for solo shooter, pressing two target buttons will throw a delayed pair to simulate a report pair. Otherwise, pressing two buttons throws a true pair.

Standard Sporting Clays

When the TX4 is set to Standard Sporting mode:

1. Singles: Press target button 1-A or 2-B.
2. True pair 1 + 2: Press the center button (TP).
3. If the TX4 is set for solo shooter, pressing the 3-C button will throw a delayed pair first, trap #1, and 3 seconds later, trap #2.



EZPull TX-4 Quick Guide

Skeet

When the TX4 is set to Skeet mode:

1. High house, press button 1-A.
2. Low house, press button 2-B.
3. Doubles, press the center button (TP).
4. In Skeet mode, the TX4 can be set for International Skeet with random delay between 0 and 3 seconds.

Delayed Pair with Solo Delay on TargetManager

When using TX4/Pro with TargetManager, a solo shooter can throw a delayed pair to simulate a report pair:

1. Use a card with Solo Delay or if TargetManager is in Solo Delay mode, press keys [2], [3] or [4] for a respective delay in seconds.
2. Press the button for the first target. Release the button and immediately press the button for the second target.
3. The first target will launch after the solo delay period.
4. The second target will launch after another solo delay period.
5. For a Rafael pair, press the same button twice.