

---

## EZPull Trap Sensitivity Setup Guide

---

1. **Enter Setup Mode:** Remove the rubber boot. Remove the battery door. Remove one battery. Press and hold setup “wrench” [🔧] key and replace the battery. When both lights are on steady, release the key. The lights will alternate slowly indicating the unit is in Setup mode.
2. **Enter Voice sensitivity Adjustment:** Press the [▶] + [🔊] keys simultaneously, the lights will blink rapidly. When light are off, release both keys. Observe the number of blinks on the right light. This is the current sensitivity level.
  - 2.1. **To increase:** press and release the “Speaker” [🔊] key. The operation is cyclical, after you reach #5, the next number is #1.
  - 2.2. **To decrease:** press and release the “Target” [🎯] key. The operation is cyclical, after you reach #1, the next number is #5.
3. **Verify:** After each key press, observe the lights to verify the number.
4. **Save:** Once you have the required value, press and hold the “ON/OFF” [🔌] key until lights stop flashing. Release the key, the lights will alternate slowly indicating the unit is in back in Setup mode.
5. **Exit Setup Mode:** When in Setup mode, press and hold the “Target” [🎯] and “Speaker” [🔊] keys simultaneously. Both lights will turn on steady. Release the keys. Unit will turn OFF.
6. **Back to Release Mode:** Press and release the “ON/OFF” [🔌] key to start the unit in Release mode.

