

EZPull TX-234 User Guide

EZPull TX-234 is a waterproof, wireless remote for TargetManager card system. The TX-234 can be configured for use in standard two trap Sporting Clays, three or four trap Super-Sporting setup.
For configuration setup see document *TX-234_Setup.pdf*.

Warning: To prevent serious injury, set the TargetManager card reader in PAUSE mode prior to handling trap machines.

1. Two Trap Sporting Clays mode:


Press and release a key, light(s) corresponding with the targets will glow:

- 1.1. Key **[1-A]**: trap **A**
- 1.2. Key **[2-B]**: trap **B**
- 1.3. Key **[TP]**: True Pair **A + B**
- 1.4. Key **[3-C]**: Press and release to check battery – if low battery, both LEDs will flash fast.

2. Three Trap Super-Sporting mode:

Press and release a key and observe light indicators:

- 2.1. Key **[1-A]**: trap **A**
- 2.2. Key **[2-B]**: trap **B**
- 2.3. Key **[3-C]**: trap **C**
- 2.4. Key **[TP]**: Press and release to select traps for True Pair. The left LED will flash rapidly indicating first trap selection.
- 2.5. Press and release any key **[1-A]**, **[2-B]** or **[3-C]** to select the first trap. The left LED will light solid and the right LED will start flashing rapidly indicating the second trap selection.
- 2.6. Wait for the shooter to call *pull* and immediately press and release the second trap key. Both LEDs will momentarily light solid and the pair will be thrown.
- 2.7. To abort the True Pair mode, press and release the **[TP]** again.

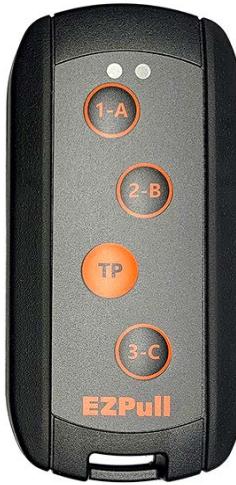

3. Four Trap Super-Sporting mode:

- 3.1. Key **[1-A]**: trap **A**
- 3.2. Key **[2-B]**: trap **B**
- 3.3. Key **[3-C]**: trap **C**
- 3.4. Key **[TP]**: trap **D**
- 3.5. **True Pair**: Simultaneously press and release any two keys to throw a True Pair. Both LEDs will momentarily light solid and the pair will be thrown.

4. Troubleshooting:

If after pressing any of the keys, the light alternate rapidly, this could indicate the following conditions:

- 4.1. If the card reader is on and counting, then it's time to replace the batteries. See replacing batteries section below.
- 4.2. If the batteries are good and the card reader is on, has a card and does not count, then the remote is not paired with the card reader. See the Setup manual.

5. Replacing batteries:

Prior to opening the battery door screw, make sure the TX-234 is completely dry (no water in grooves around the battery door)! Use a small hand screwdriver to open the battery door's screw and remove the battery door. Follow the polarity marks to replace two AAA size alkaline batteries in the compartment.

