EZPull TRPUL-105 Quick Reference

Communication problem with the base station

Both LEDs flashing once a second, the system is in Pause mode.

Left LED


Blinks once a sec. – System in Play mode.

Manual Target

Press & release to throws a target. The left LED will turn on steady for 1 Sec.

Pause

Press & hold for 0.5 Sec, both lights flash alternately, when they stop, release the key. The left LED will flash rapidly followed by the two LEDs flashing every second.

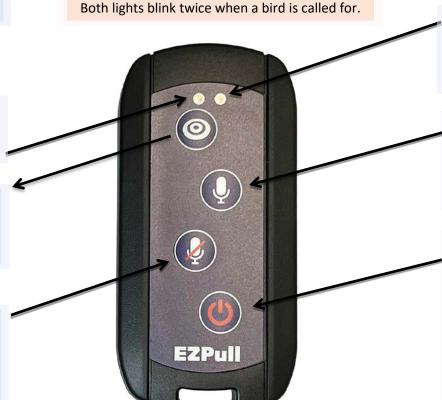

Right LED

Blinks once every 4 sec. - unit is asleep. Press & release the Power key to wake up.

Play

Press & hold for 0.5 Sec, both lights flash alternately. When they stop release the key. The left LED will blink once a second.

Power

To turn ON, press & release, both LEDs will turn on followed by the left LED blinking once a second. Turning the Puller unit on, will also put the system in Play mode and wake up the voice units.

To turn OFF, press & hold, the right LED blinks rapidly. Release key when the LED stops blinking.

Turning the Puller unit off, will also put the system in Pause mode and cause the voice units to power down within a couple of minutes.