
EZPull TX-2C User Guide

EZPull TX-2C is a wireless, clay target release unit for Skeet and Sporting Clays. The TX-2C has switches with good tactile feedback under a durable overly.

Always stand clear of any trap while handling the TX-2C!

- 1. Releasing targets:** Press and release any of the keys for the desired target(s). Lights corresponding with the targets will glow:
 - 1.1. **H:** releases Skeet High or trap 1/A
 - 1.2. **L:** releases Skeet Low or trap 2/B
 - 1.3. **D:** releases Skeet Doubles or True Pair
- 2. International Skeet Delay:** When the TX-2C is configured for International Skeet random delay, the user can quickly switch between instant release and random delay (For configuration setup see *TX2S_setup_guide.pdf*):

Warning: Before changing the delay, stand clear from any trap or target!

 - 2.1. **Instant Release:** simultaneously press and hold the **D+H** keys. Keep holding until the center LED glows steady. Release the keys.
 - 2.2. **Random Delay:** simultaneously press and hold the **D + L** keys. Keep holding until the center LED glows steady. Release the keys.
- 3. Solo Delay:** This feature is NOT available on TX2S_Pro. When the TX-2C is configured for 3 seconds solo delay, the user can quickly switch between instant release and solo delay (For configuration setup see *TX2_setup_guide.pdf*):

Warning: Before changing the delay, stand clear from any trap or target!

 - 3.1. **Instant Release:** simultaneously press and hold the **D+H** keys. Keep holding until the center LED glows steady. Release the keys.
 - 3.2. **Solo Delay:** simultaneously press and hold the **D + L** keys. Keep holding until the center LED glows steady. Release the keys.



Low Battery: If after pressing any of the keys, the light alternate rapidly, then its time to replace the battery.